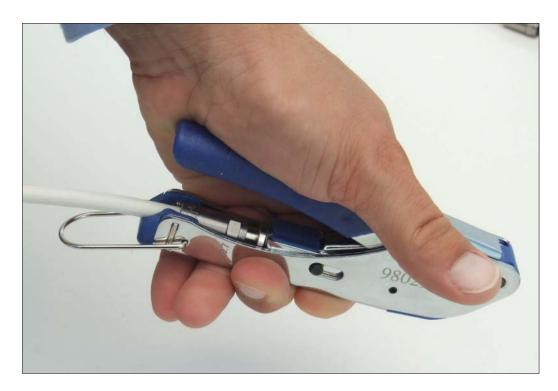# How to use the CX3 Pocket Tool

1. Insert the cable with the mounted CX3 connector as shown above

2. Compress the connector by closing the handle completely until stop as shown.